

**FLUANCE®**

Quick Start Guide  
Fi70 - Bluetooth® Music System

## Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in anyway, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Do not place open flame sources on or near the unit.
16. Batteries must be disposed of in accordance with local environmental regulations. Please recycle batteries!


## Introduction

Fluance believes everyone should experience audio in its truest form, recreating the performance the way the artist intended. Utilizing only superior components and expert audio engineering, their products are a testament to the performance that can be achieved when a passion for music takes center stage. The perfect complement to any audiophile's lifestyle, you'll be enjoying live performances in your home for years to come.


## Break-in Period

Our speakers have a Butyl rubber ring surrounding the cone. The break-in period allows the rubber to loosen and stretch, allowing the cone a larger range of movement, which gives a better sound reproduction. We recommend 10-12 hours of play at moderate volume to achieve this.

## What's Included

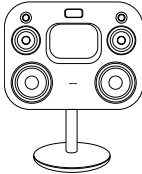

 
Music System with Stand and Mounting Hardware



Remote Control



 2 'AAA' Batteries



3ft 3.5mm Auxillary Cable



AM/FM Radio Antennas



Power Cord



Quick Start Guide




Lifetime Customer Support



2 Year Warranty


## Cabinet Buttons

1. Power ON/OFF
2. Source
3. Settings
4. Previous/Back\*
5. Play/Pause
6. Next/Forward\*
7. Volume Down
8. Volume Up

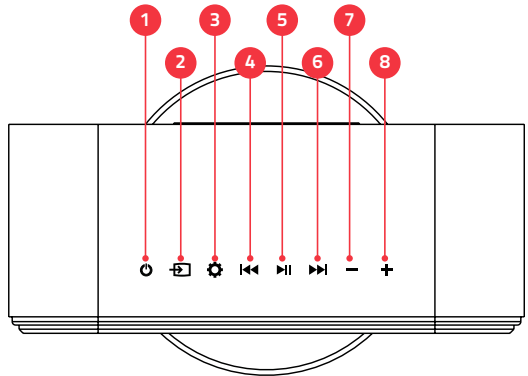

## Remote Control Layout


1. Power ON/OFF
2. Volume
3. Source
4. Bass
5. Mute
6. Play/Pause
7. Forward/Back\*
8. Settings
9. Treble

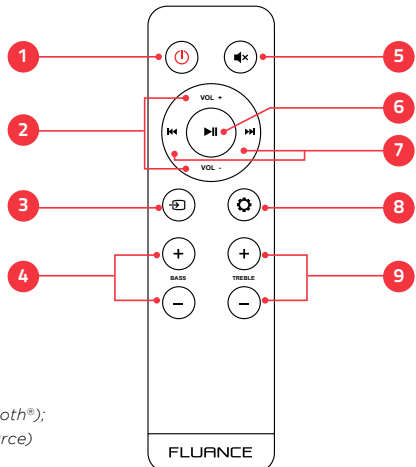


*\*Note: Previous Track/Next Track (when on Bluetooth\*);  
Previous Station/Next Station (when on Radio Source)*

## First Time Use


### Assembling The Stand (Optional)

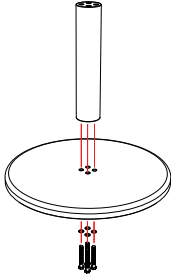

Attach the pole to the base using the large screws and washers.

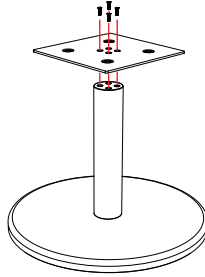


Attach the pole to the bracket using the small screws.

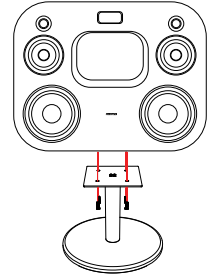


Attach the assembled stand to the cabinet with the bolts.


### Powering Up Your Music System

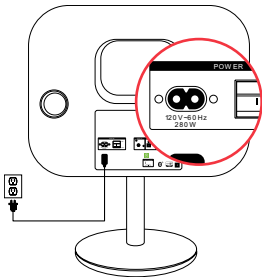


Plug the Power Cord into the Cabinet and into a wall outlet.

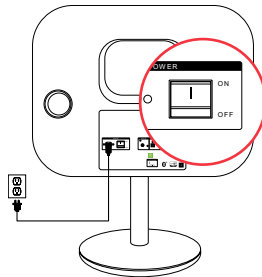


 Flip the Power Switch to the ON position.




Press  on the Remote or Cabinet.


## Listening To Music

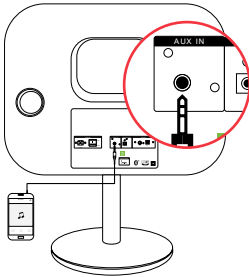

AUX Playback from mobile devices.

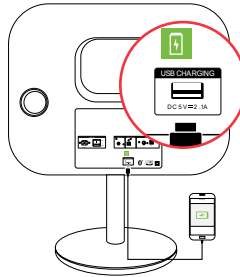

USB Charging for mobile devices.

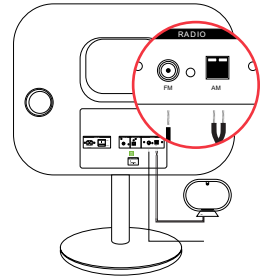


AM/FM Antenna for radio listening.

## Optical Audio Signal Compatibility


The Fi70 does not support Dolby Digital Audio or DTS Audio. Locate Audio Output Settings on your source device and ensure Dolby Digital is turned off. This setting is sometimes referred to as PCM or Stereo. Some TV's also require that audio output be enabled. This setting may be referred to as External Speakers. Ensure this is selected as your speaker/audio output.

*For instructions on a specific device, please consult the device's user manual.*


## Bluetooth® Setup

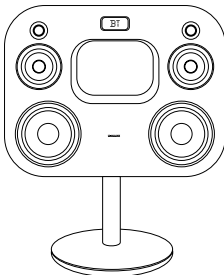

Press **BT** until you see "BT" on the LCD screen.

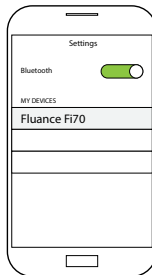


Connect to Fluance Fi70 from your mobile device's Bluetooth® settings.

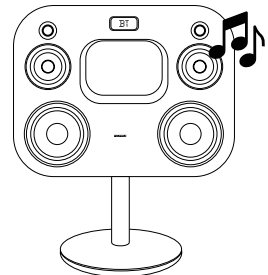


Play Music!  
To reset Bluetooth® pairing, press and hold the Play/Pause Button for 3 seconds.

## Setting The Time

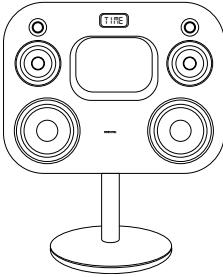




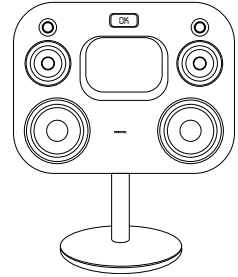
Press the  Button until you see "TIME" on the LCD screen.

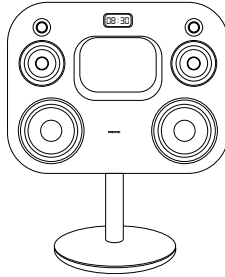Use the   Buttons to cycle between AM or PM.



Press the  Button to confirm.


Press the   Buttons to select the hour and press the  Button again to confirm.






Press the   Buttons to select the minute and press the  Button again to confirm.

"OK" will now be displayed on the LCD screen.

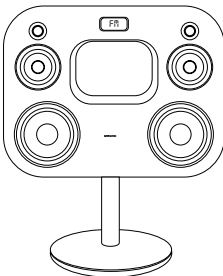
## Save Radio Presets



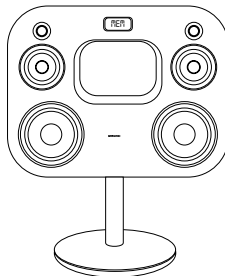


On the AM or FM input, press the   Buttons to select the radio station you wish to save.

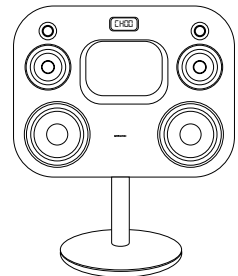


Tap the  Button until you see "MEM" on the display, now press the  Button to continue.




"CH00" will flash on the display.



Press the   Buttons to select the pre-set channel to save to. Press the  Button to confirm.

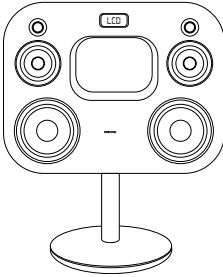
## Changing The Display

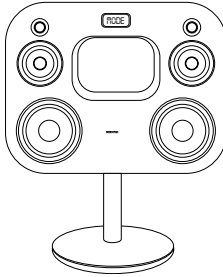


Press the  Button until LCD is displayed.



Use the   Buttons to cycle between MODE, TIME, and OFF.

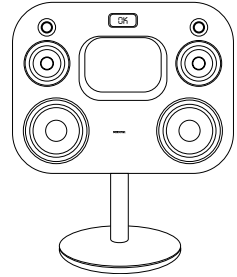

Press the  Button to confirm the selection. "OK" will be displayed on the LCD screen.

**MODE** - Displays the current source

**TIME** - Displays the time

**OFF** - Turns the display off



## Frequently Asked Questions

### **How do I adjust the Volume / Change the Bass or Treble?**

Select the equalizer using the settings button on the touch panel or using the Bass/Treble EQ buttons on the remote. Use the +/- buttons to increase or decrease volume accordingly. The range of the BASS/TREBLE is -10 to 10 and the range of volume is 0 to 40.

### **What is “Auto-Pairing” and how does it work?**

Auto-Pairing is a convenient connection feature implemented into all fluance bluetooth enabled speakers. If the connected Bluetooth enabled device leaves the connection range of the Fi70 and returns at a later time, the device will automatically connect. If the device's Bluetooth function is disabled and then enabled at a later time, the device will automatically connect as well. Please note that the Fluance Fi70 will only auto-pair to the last device that it was connected to and if the Fi70 is set to its Bluetooth input.

### **What is the purpose of the USB port on the back panel?**

The USB port is designed to charge any of your devices such as smartphones, tablets, music players, etc., however, it cannot be used for playing audio files with the Fi70.

### **I can't connect my device to the Fi70.**

Please ensure Bluetooth is enabled on your device and attempt to re-pair with the Fi70. Please consult the included Quick Start Guide. If more troubleshooting is needed consult the full instruction manual which is located at [Fluance.com/Support](http://Fluance.com/Support).

### **Another device is connected to the Fi70 and I wish to connect my device.**

You can reset any Bluetooth connection by pressing and holding the “Play/Pause” button on the remote/touch panel. The Fi70 will be available to connect to any new device for the next 30 seconds. If no device is found, the Fi70 will auto-pair back to the previously connected device. Please note only one device can be paired at a time.

### **What is the range of the Bluetooth Connection?**

The Fi70 operates with Power Class 2 Bluetooth devices, which have a range of approximately 33' feet (line of sight).

### **How can I connect a turntable to the Fi70?**

The best method to connect a turntable to the Fi70 is using an Aux to RCA cable. The RCA connection would be connected to the turntable and the Aux connection would be connected to the Fi70.

# Certification Information

## FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

## IC Warning

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

(1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

## Warranty Information

Fluance gives the following warranty to the original customer of each new Fluance product purchased from a dealer authorized by Fluance. Fluance warrants that each new product, under normal use, is free from defects, subject to the terms and conditions set forth. If a defect should occur within the warranty period, repairs will be made free of charge for parts and labor when such defects are determined by us to be attributable to faulty materials or workmanship at time of manufacture.

### Warranty Period

The Fluance products listed below are warranted for parts and labor for the stated period from the date of original purchase and are subject to the terms and conditions of the warranty.

Home Audio Passive Speakers: Lifetime Warranty

Active/Powered Speakers: 2 Year Warranty

HiFi Turntables: 2 Year Warranty

### Warranty Exclusions

- Products purchased from a dealer not authorized by Fluance.
- Products with the serial number defaced, altered or missing.
- Defects resulting from disaster, accident, abuse, misuse, lightning, power surges, neglect, unauthorized modification or water damage.
- Defects or damage as a result of repairs performed by a person or party not authorized by Fluance.
- Defects or damage occurring during shipping (claims should be made with the shipping company).

### To Obtain Warranty Service

Should your Fluance product require warranty service, please contact your Fluance Authorized Dealer and send your product fully insured and freight prepaid to the nearest Fluance authorized service center. Before sending to Fluance, you will be required to get a Return Authorization Number from your dealer.

Products shipped without a valid Return Authorization Number will be refused. To avoid possible shipping damage, make sure the product is properly packaged and well protected. Include a copy of your original bill of sale as proof of warranty along with your name, home and/or work telephone number(s), a complete return address and a detailed description of the faults.

Products repaired within warranty will be returned freight prepaid. This warranty in itself is not considered a valid proof of purchase. When applying for warranty repairs, you must present the original copy of your bill of sale as proof of warranty.

Fluance.com