



Powered Speakers Connection Guide

TV + Powered Speakers

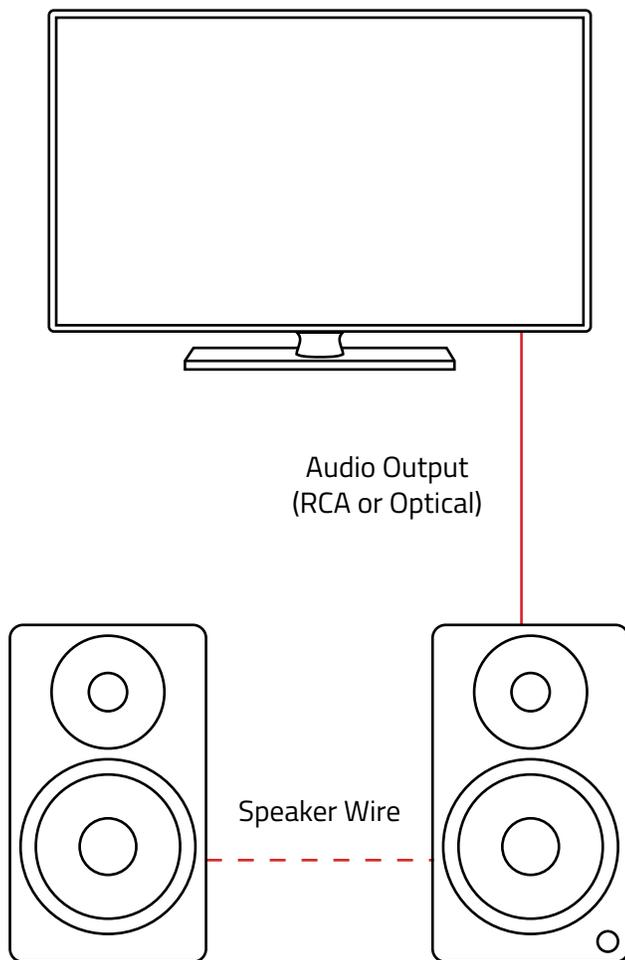

Turntable + Preamp + Powered Speakers

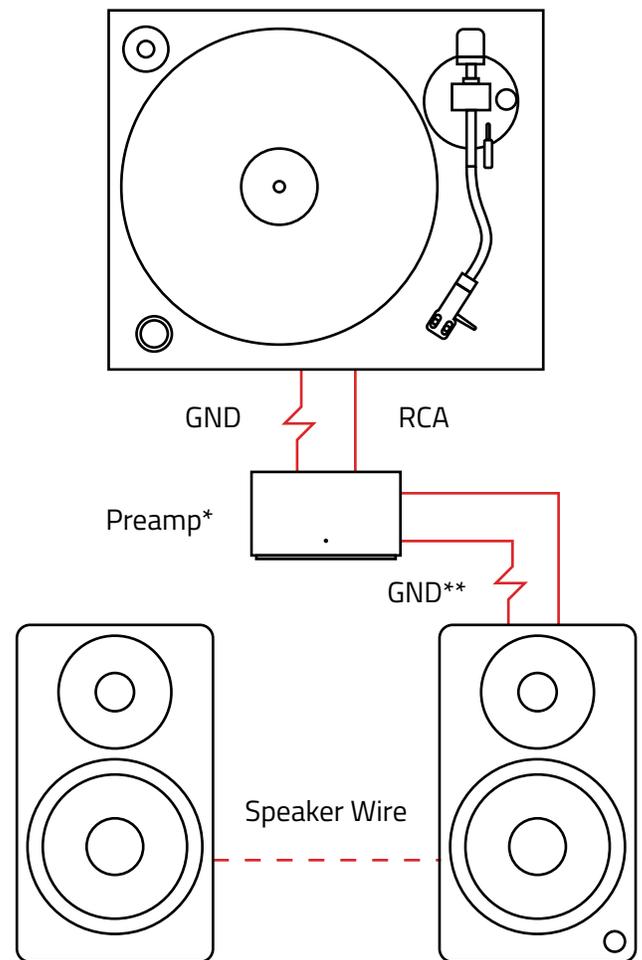

Optical Audio Signal Compatibility

Fluance Powered Speakers do not support Dolby Digital Audio or DTS Audio. Locate the audio output settings on your source device and ensure Dolby Digital is turned off. The correct audio output setting is commonly referred to as PCM or Stereo.

Some TVs also require that audio output be enabled. This setting may be referred to as External Speakers. Ensure this is selected as your speaker/audio output. For instructions on a specific device, please consult the device's user manual.

* Some Turntables have a Built-in Preamp (Line Output). Ensure you do not use an external preamp if using a Line Output.

** Connecting a ground wire from the Preamp to the Powered Speakers may not be needed. If experiencing humming or other audio issues it is recommended to connect a ground wire to a screw on the back of the active Powered Speaker.