

EAKAR100 INSTRUCTION MANUAL

ALL-IN-ONE KARAOKE MICROPHONE SYSTEM

INTRODUCTION

Thanks for purchasing the Electrohome All-in-One Karaoke Microphone System. This product will be the mixer between your TV and DVD player. You will hear your amazing voice come out from the TV speakers.

INCLUDED IN THIS PACKAGE

- All-in-One Dynamic Microphone System
- DVD Karaoke Disc with Music from Various Artists
- RCA Cable for TV Input & DVD Output
- 1 "AA" Battery
- Instruction Manual
- 1 Year Warranty
- Lifetime Live Customer Support


WARNING: All packing materials such as tape, plastic sheets, wire ties and tags are not part of this item and should be discarded for your child's safety.

Note: Please keep this instruction manual, as it contains important information.

BATTERY INSTALLATION

- 1) Remove the battery compartment door by pushing the latch downward.

- 2) Insert 1 “AA” new battery. Follow the diagram inside the battery compartment to ensure that the battery is properly inserted.
- 3) Close the battery compartment cover.

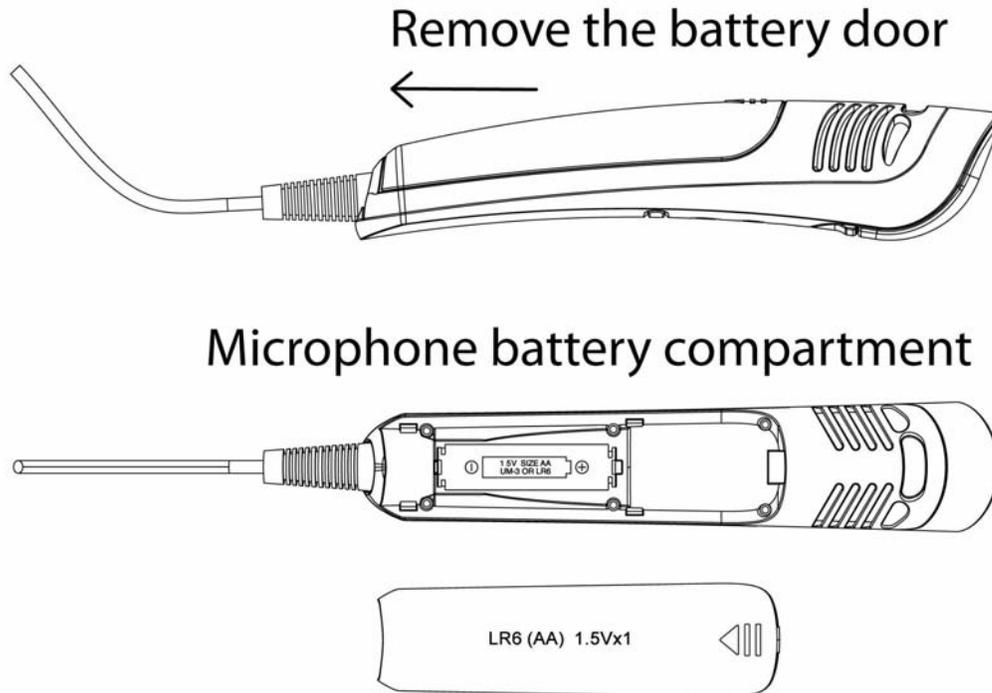

WARNINGS:

- Batteries must be placed by an adult.
- The use of alkaline batteries is recommended.
- Place batteries based on the polarity shown on the battery compartment.
- Only use the recommended type of batteries.
- Non rechargeable batteries are not to be recharged.
- Rechargeable batteries are only to be charged under adult supervision.
- DO NOT mix different types of batteries together.
- DO NOT mix new and exhausted batteries together.
- DO NOT use rechargeable batteries.
- If you do not use the product for an extended period of time, we recommend that you take out the batteries. Remove exhausted batteries from the product. Battery leakage may cause damage.

- DO NOT short circuit the terminals of the battery.
- DO NOT throw batteries into the fire. They may explode.
- Keep the packaging for future reference as it contains important information.

CONNECTING YOUR PRODUCT

This product has 2 sets of RCA plugs. Please follow the instructions to connect the device.

Step 1 - Connect the RCA cord to TV:

Connect the audio cables (“TV Audio Input L” and “TV Audio Input R”) to the audio input of the TV.

Connect the video cable (“TV Video Input”) to the video input of the TV.


Step 2 - Connect the RCA cord to the DVD player:

Connect the audio cables (“DVD Audio Output L” and “DVD Audio Output R”) to the audio output of the DVD player.


Connect the video cable (“DVD Video Output”) to the video output of the DVD player.

Step 3 – Connect extra microphone (sold separately):

Connect a second microphone to the 6.3mm (1/4”) extra microphone input provided by the Electrohome All-in-One Karaoke Microphone System.

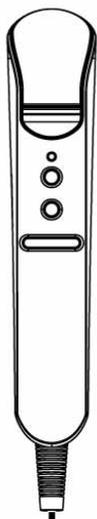



REAR VIEW OF TV

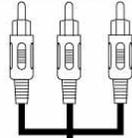

TV

TV INPUT

 REAR VIEW OF DVD

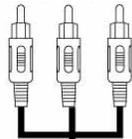

DVD


DVD OUTPUT

Extra Mic Jack



Extra Mic

OPERATION OF THE PRODUCT

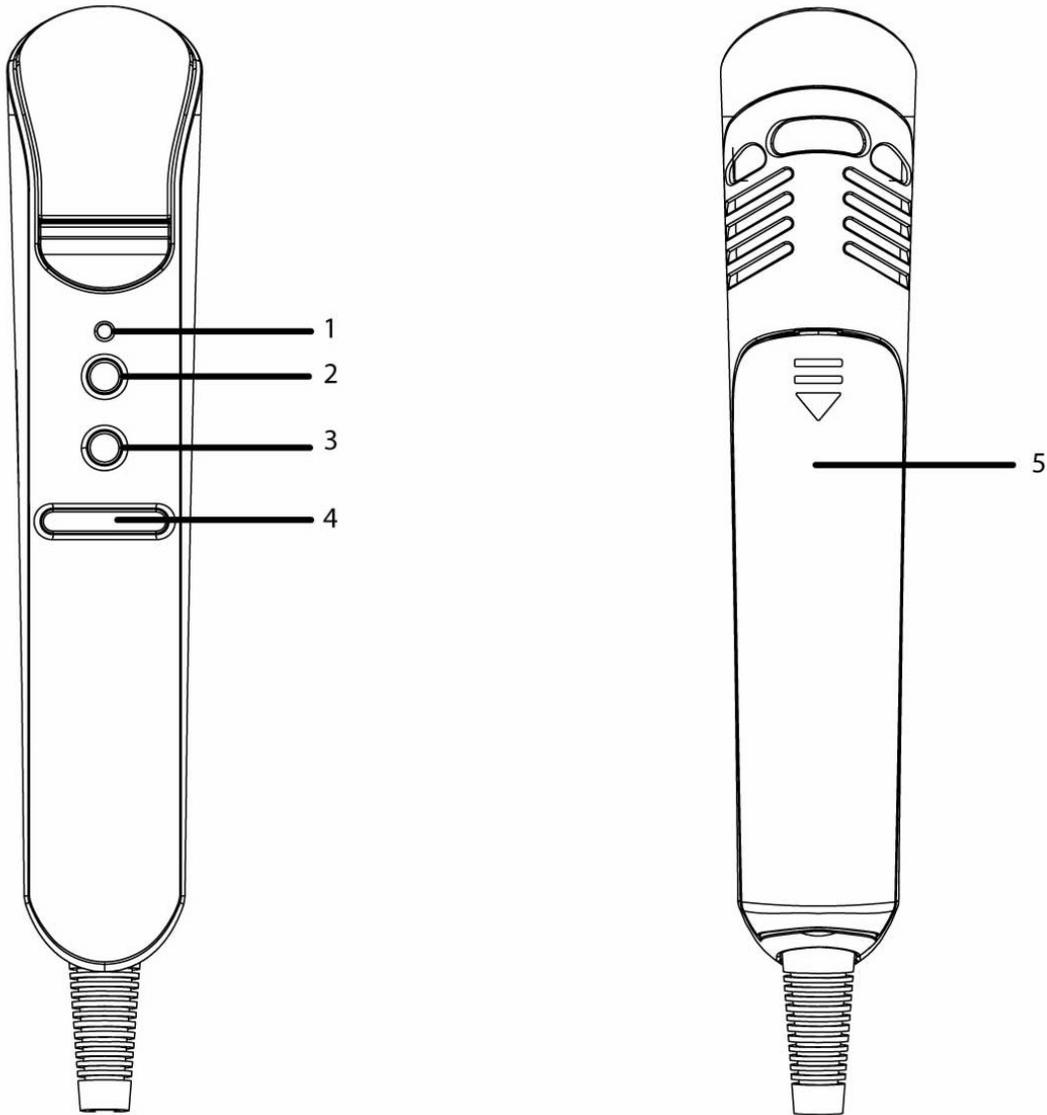

- 1) ON/OFF LED
- 2) ON/OFF Button
- 3) ECHO Button
- 4) Volume + / - Button
- 5) Battery Door

- 1) Turn on TV and DVD player.
- 2) Insert karaoke DVD disc into the DVD player.
- 3) Press the ON/OFF button to turn on the karaoke microphone.
- 4) Adjust the volume to a comfortable level.

- 5) Adjust the echo volume to a suitable level by pressing the echo button. There are 3 levels of echo effect – no echo, echo low and echo high.
- 6) Play the karaoke DVD disc in the DVD player.
- 7) Start to sing.
- 8) Press ON/OFF button again to turn off the karaoke microphone when finished.

TROUBLESHOOTING

- 1) Problem: karaoke microphone is not working

Solution: check battery compartment to ensure battery is properly inserted. Turn on karaoke microphone, ON/OFF LED should be turned on. If LED does not turn on, battery is running low, replace for a new battery.

- 2) Problem: no sound from TV

Solution: check the volume of karaoke microphone and TV has been adjusted to a proper level.

CARE & MAINTENANCE

- 1) Keep the unit clean by wiping it with a slightly damp cloth.
- 2) Keep the unit out of direct sunlight and away from any direct heat source.
- 3) Remove the battery when the unit is not in use for an extended period.
- 4) Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.