



Receiver Repairing Instructions

Step 1: Press and hold down Power button



Step 2: Plug in the power adapter



Step 3: Release the power button once power LED blinks purple.





Transmitter Repairing Instructions

Step 1: Plug in the power adapter



Step 2: Press and hold down the Power button



Step 3: The Power LED should be flashing blue. The blue flashing speed will begin to slow down. Once it begins to slow down, release power button to enter Pairing mode.

