

Fi50 High Performance Wireless Bluetooth Wood Speaker System
Fi50 Système haut-parleur sans fil Bluetooth performant en bois



FCC STATEMENT



This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:
this device may not cause harmful interference, and
this device must accept any interference received, including interference that may cause undesired operation

Warning:

This equipment has been tested and is found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Warning:

Changes or modifications not expressly approved by the party responsible for compliance with the FCC Rules could void the user's authority to operate this equipment.

IC STATEMENT / CAN ICES-3 (B)/NMB-3 (B)

Industry Canada Statement

Operation is subject to the following two conditions:

1. This device may not cause interference
2. This device must accept any interference, including interference that may cause undesired operation of the device

SAFETY INFORMATION

1. Read all instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Unplug this apparatus during lightning storms or when unused for long periods of time.
13. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged. Liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
14. Apparatus shall not be exposed to dripping or splashing, and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
15. The battery shall not be exposed to excessive heat such as sunshine, fire or the like.
16. The direct plug-in adapter is used as disconnect device, the disconnect device shall remain readily operable.
17. **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation. This Class [B] apparatus complies with Canadian ICES-003.



This marking indicates that this product should not be disposed with other household wastes throughout North America. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

TABLE OF CONTENTS

FCC STATEMENT 2

IC STATEMENT 2

SAFETY INFORMATION..... 3

WHAT’S INCLUDED 5

FEATURES 5

DISCLAIMERS 5

TOUCH PANEL 7

SETUP 7

 FOR BLUETOOTH® ENABLED SMARTPHONES..... 7

 TO DISCONNECT 7

 USING A 3.5MM AUXILIARY AUDIO CABLE 7

OPERATION..... 8

 PAIRING MULTIPLE DEVICES..... 8

 RECONNECTING YOUR DEVICE 8

 OUT OF RANGE OR LOST SIGNAL 8

 USB INPUT 9

 RESET PAIRING..... 9

TOUBLESHOOTING 10

SPECIFICATIONS 11

 
FLUANCE WARRANTY 12

WHAT'S INCLUDED

- High Performance Wireless Bluetooth Wood Speaker
- 4x Metal Isolation Floorspikes
- 4x Rubberized Isolation Floorspikes
- 3 ft. 3.5mm Auxiliary Audio Cable
- Quick Start Guide
- 2 Year Parts and Labor Warranty
- Lifetime Customer Support

FEATURES

- Room filling, high fidelity sound.
- Wirelessly stream music from any Bluetooth device
- Audiophile grade MDF wood cabinetry
- Powered by aptX enhanced audio technology
- Touch panel (Display Toggle/EQ/Volume Control)

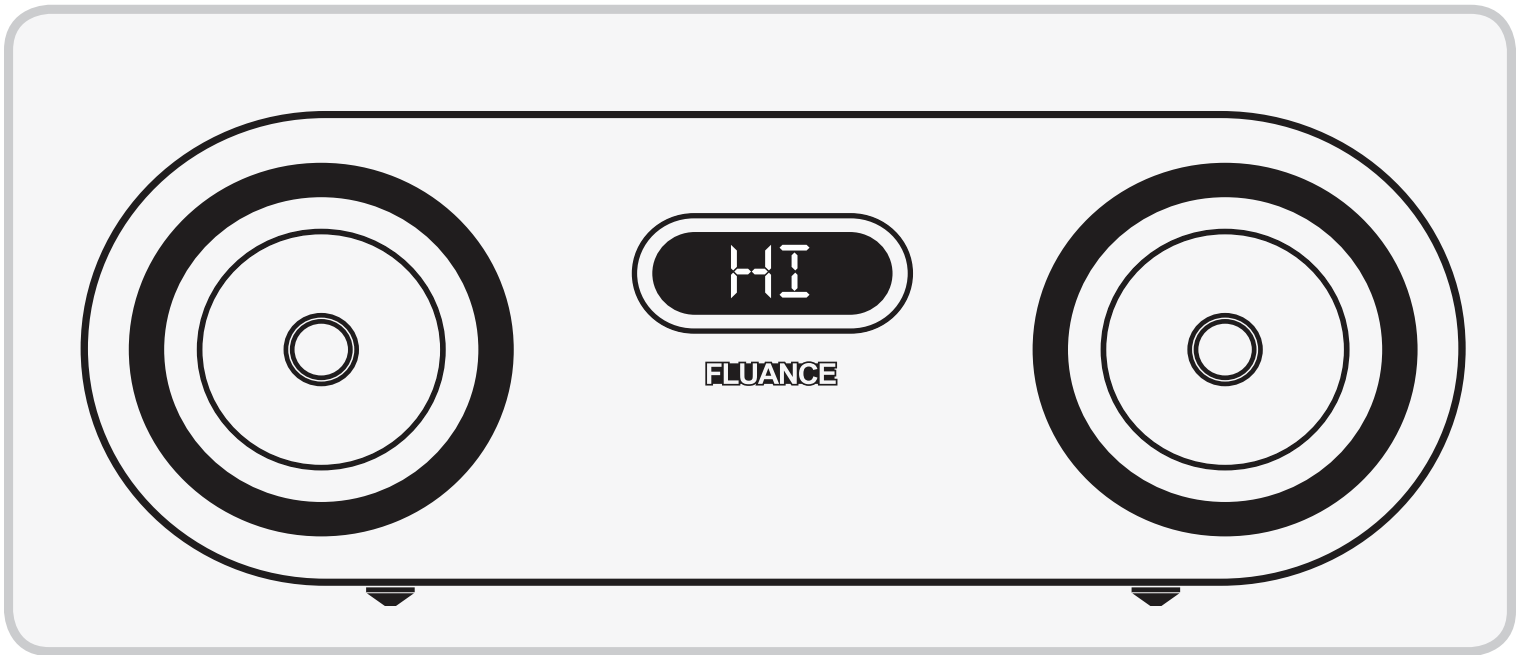


Disclaimers

Maximum line of sight for Bluetooth transmission range is 33 feet. Obstacles may decrease transmission distance. Certain Bluetooth features, including those listed, may not be supported by all compatible Bluetooth-enabled devices, and/or the functionality of such features may be limited in certain devices, or by certain wireless carriers. We reserve the right to change models, configuration, or specifications without notice or liability. Product may not be exactly as shown.

©2015 FLUANCE®. FLUANCE®, the FLUANCE® logo, and any other FLUANCE® marks may be registered. All other trademarks are property of their respective owners.

 BUTTONS AND CONNECTIONS

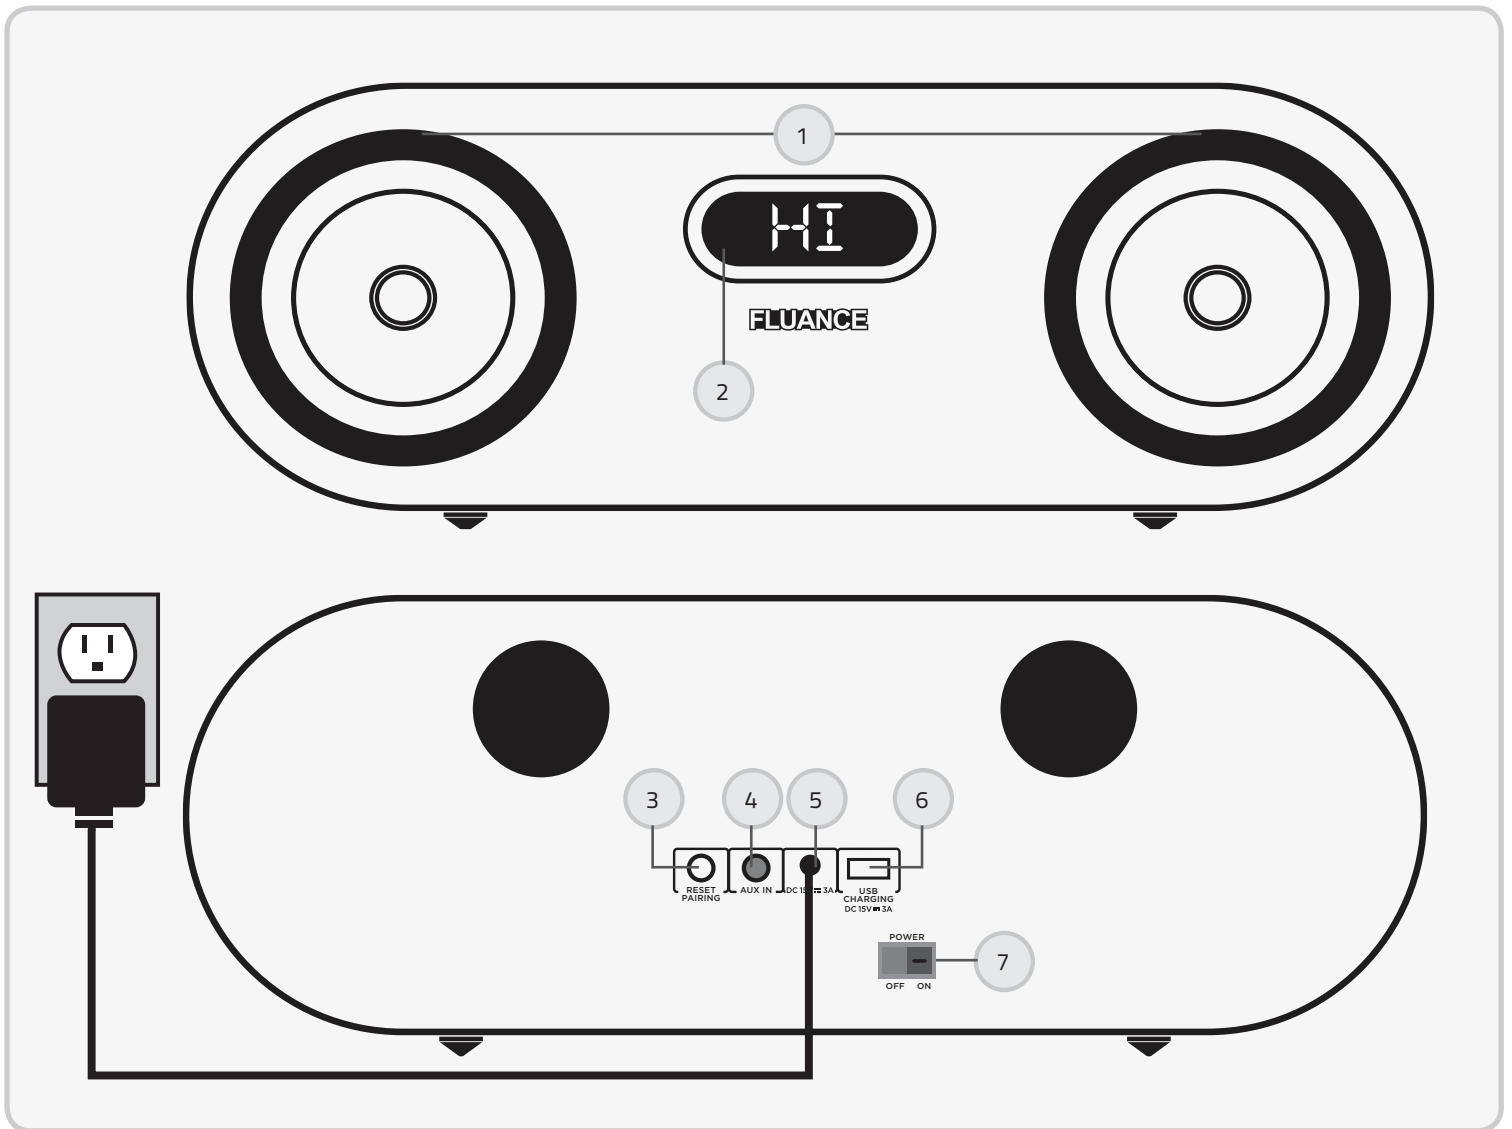

- | | |
|--|---------------------------|
| 1. Speakers | 5. External AC Power Cord |
| 2. LED Input Indicator
(Bluetooth or Aux) | 6. USB Charging |
| 3. Reset Pairing Button | 7. Power ON/OFF Switch |
| 4. Auxiliary Audio Input | |

Touch Panel



Display:

On > Off > 50% Dim

(Unit will still function when display is disabled)



Equalizer:

Volume > Bass > Treble



Decrease:

 
Volume / Bass / Treble



Increase:

Volume / Bass / Treble

SETUP

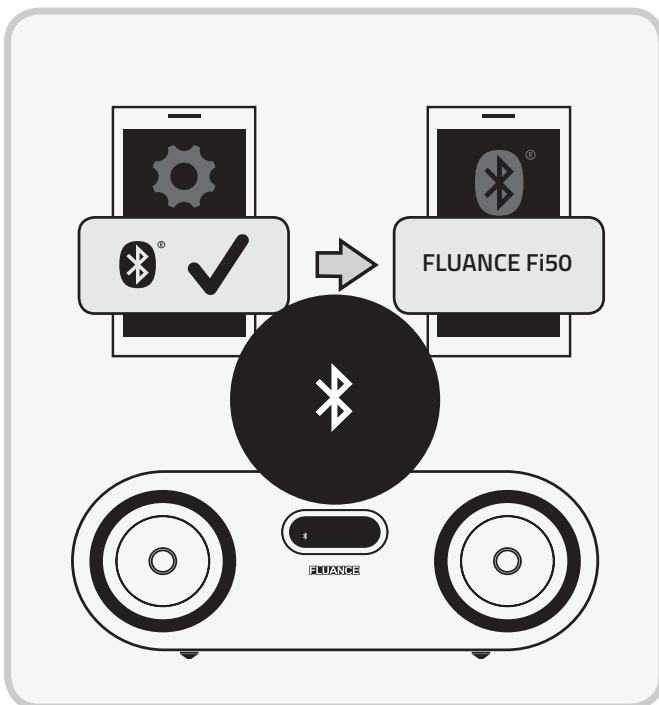

For Bluetooth® Enabled Smartphones

 
1. Go to SETTINGS to turn on Bluetooth.
2. A list of Bluetooth devices will appear.
3. Select "Fluance Fi50".
4. Click YES if asked to connect.
5. You will hear an alert when connected and the Bluetooth Logo LED will glow solid white.
6. You can now control your music using your Smartphone. The "Bluetooth Active" icon will appear on the main screen when connected.

To Disconnect


1. Go to SETTINGS then to your Bluetooth settings.
2. A list of Bluetooth devices will appear.
3. Select "Fluance Fi50".
4. Select YES if asked to disconnect.
5. You will hear an alert when disconnected.

Using a 3.5mm Auxiliary Audio Cable

1. Connect one end of the 3.5mm Auxiliary Audio Cable to the AUX IN input on the back of the unit.
2. Connect the other end of the 3.5mm Auxiliary Audio Cable to the Headset Input on your Smartphone/ Audio Device. (Bluetooth will be disabled following step 2)
3. The AUX LED will glow solid white.
4. You can now control your music using your Smartphone/Audio Device.

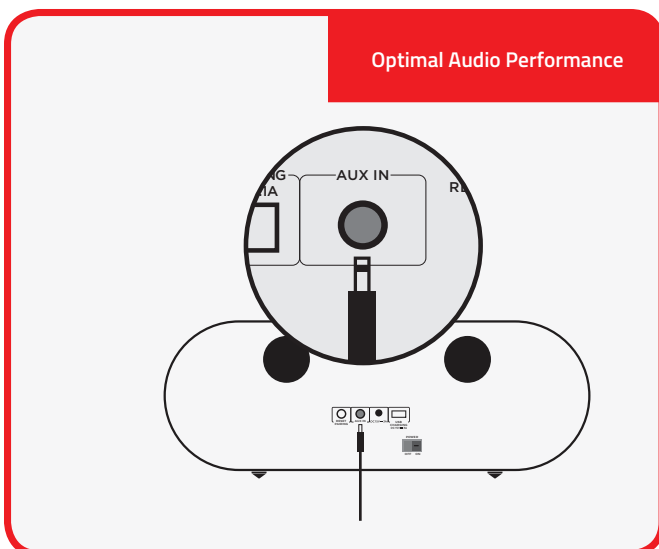

SETUP

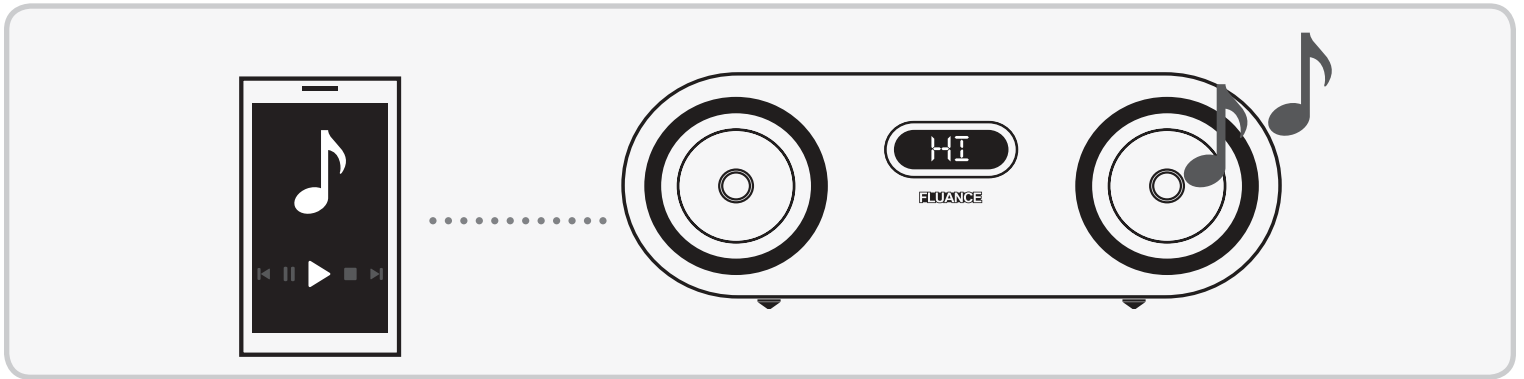 

How you access your Bluetooth Settings may vary from one manufacturer to another. Maximum line of sight for Bluetooth transmission range is 33 feet. Obstacles may decrease transmission distance.

OPERATION

Pairing Multiple Devices

Although the Fluanze Fi50 can only play music from one device at a time, it can memorize up to 8 device profiles. Switching from one device to another:

1. Access the SETTINGS and turn Bluetooth function of the device OFF.
2. The Fluanze Fi50 can now be connected to a different device.
3. Follow the “For Bluetooth® enabled Smartphones” instructions to pair a new device.

Reconnecting Your Device

If you move out of range or turn off the Bluetooth feature on your device, the Fluanze Fi50 will disconnect from your device. To reconnect, simply turn the Bluetooth feature back on or move within 33 feet (line of sight) of the Fluanze Fi50.

 
Unit will auto-pair if it was the last device connected. If not, please refer to the pairing instructions.

Out Of Range Or Lost Signal

If the music device is out of range (beyond 33 feet) of the Fluanze Fi50 or if there is something blocking the Bluetooth signal, the Bluetooth logo LED will flash to indicate that the Bluetooth connection with the music device has been lost. To avoid a lost connection:

1. Move the music device back into range (within 33 feet), and/or make sure there’s a clear line of sight and that there are no obstructions between the Fluanze Fi50 and the device.
2. Within 15 seconds, the connection will automatically be reestablished and the Bluetooth LED light will turn solid.
3. If the connection is lost for more than 15 seconds, the connection will need to be reestablished. Follow the instructions in the “Reconnecting your device” section.


OPERATION

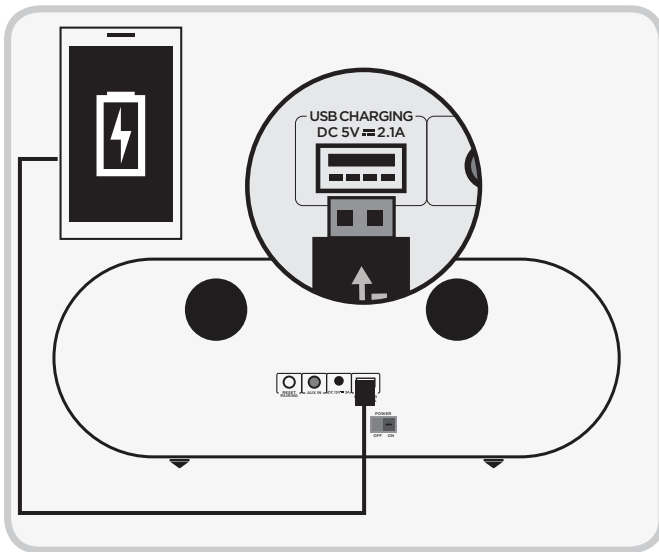

USB Input

The USB input allows for quick and easy charging of your smartphone or tablet while still enjoying your music. The USB input cannot be used for playback.

 1. Connect one end of the USB Cable to the 2.1 A USB Charging Input on the Fluance Fi50.
2. Connect the other end of the USB Cable to your Smartphone/Audio Device.
3. You can continue to enjoy your music using your Smartphone/Audio Device while it is charging.
4. To switch from one saved/stored device to another, follow the steps below.

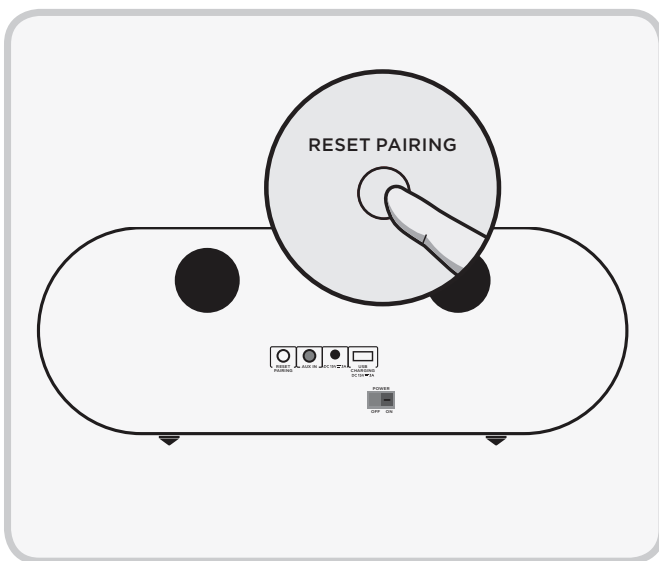

Reset Pairing

The Reset Pairing button is used to unpair another paired device, allowing you to connect a new device to the Fluance Fi50.

1. Press the Reset Pairing button on the Fluance Fi50 to break any existing Bluetooth connections.
2. The unit will search for a new device for 30 seconds. After 30 seconds, if no new connection is made, it will autopair back to the previous device.
3. You can also unpair the connection directly from your Smartphone by disabling the Bluetooth connection.

TROUBLESHOOTING

Issue	Device	Fluance Fi50
No music from Fluance Fi50 speakers using Bluetooth	<ul style="list-style-type: none"> ▪ Confirm that your Smartphone/ Audio Device is powered ON ▪ Confirm that the Bluetooth function is ON ▪ Confirm you are connected via Bluetooth with the Fluance Fi50 ▪ Confirm you are playing music from your Smartphone/Audio Device ▪ Confirm that the volume is set to a comfortable listening level ▪ Confirm you are within range of the Fluance Fi50 	<ul style="list-style-type: none"> ▪ Confirm that the Fluance Fi50 is powered ON ▪ Confirm you are within range of the Smartphone/Audio Device ▪ Confirm that the volume on the Fluance Fi50 is set to a comfortable listening level
No music from Fluance Fi50 speakers using Auxiliary Audio Cable	<ul style="list-style-type: none"> ▪ Confirm that your Smartphone/ Audio Device is powered ON ▪ Confirm that the Auxiliary Audio Cable is correctly and firmly connected to the Headset Input of your device ▪ Confirm you are playing music from your Smartphone/Audio Device ▪ Confirm that the volume is set to a comfortable listening level 	<ul style="list-style-type: none"> ▪ Confirm that the Fluance Fi50 is powered ON ▪ Confirm that the Auxiliary Audio Cable is correctly and firmly connected to the AUX IN input of the Fluance Fi50 ▪ Confirm that the volume on the Fluance Fi50 is set to a comfortable listening level

SPECIFICATIONS

Specifications are subject to change without notice. Measurements and weights may vary slightly.

System Type	2 Way 4 Driver Bluetooth Music System with Integrated Amplifier
Woofers	Dual 5" Woven Glass Fiber Composite Drivers with Butyl Rubber Surrounds
Tweeter	Dual 3/5" Coaxial Mounted Silk Soft Dome Ferrofluid Cooled
Input	3.5mm Auxiliary Audio Input, 2.1 A USB Charging Input
Frequency Response	40Hz - 20KHz
Amplifier Power (RMS)	40 Watts Continuous Average Output
Enclosure	Tuned Rear Port Bass Reflex Design
Cabinet	Precision Crafted MDF Internally Braced
Dimensions	52 x 14.6 x 18 cm
Weight	6.1kg

FLUANCE® WARRANTY

Thank you for choosing FLUANCE® Speaker Products!

FLUANCE® gives the following warranty to the original customer of each new FLUANCE® product purchased from a dealer authorized by FLUANCE®. FLUANCE® warrants that each new product, under normal use, is free from defects, subject to the terms and conditions set forth. If a defect should occur within the warranty period, repairs will be made free of charge for parts and labor when such defects are determined by us to be attributable to faulty materials or workmanship at time of manufacture.

WARRANTY PERIOD: The FLUANCE® products listed below are warranted for parts and labor for the stated period from the date of original purchase and are subject to the terms and conditions of the warranty.

HOME AUDIO PASSIVE SPEAKERS: LIFETIME WARRANTY
ACTIVE/POWERED SPEAKERS: 2 YEAR WARRANTY

WARRANTY EXCLUSIONS: Products purchased from a dealer not authorized by FLUANCE®. Products with the serial number defaced, altered or missing. Defects resulting from disaster, accident, abuse, misuse, lightning, power surges, neglect, unauthorized modification or water damage. Defects or damage as a result of repairs performed by a person or party not authorized by FLUANCE®. Defects or damage occurring during shipping (claims should be made with the shipping company).

To Obtain Warranty Service: Should your FLUANCE® product need warranty service, please contact your FLUANCE® Authorized Dealer and send your product, fully insured and freight prepaid to the nearest FLUANCE® authorized service center. Before sending to FLUANCE®, you will be required to get a Return Authorization Number from your dealer. Products shipped without a valid Return Authorization Number will be refused. To avoid possible shipping damage, make sure the product is properly packaged and well protected. Include a copy of your original bill of sale (including date of purchase and invoice number), serial number, your name, email address, home and/or work telephone number(s), a complete return address and a detailed description of the faults. Products repaired within warranty will be returned freight prepaid. When applying for warranty repairs, you must present the original copy of your bill of sale.

TO OBTAIN THE NAME AND ADDRESS OF THE NEAREST AUTHORIZED FLUANCE® SERVICE CENTRE OR FOR MORE INFORMATION ON THIS WARRANTY

- Contact FLUANCE® Support by Email: sales@fluence.com
- Visit www.FLUANCE.com
- Mail your inquiry to: FLUANCE Customer Service, 4080 Montrose Road, Niagara Falls, ON L2H 1J9
- Call toll free 1.888.61.SOUND (1.888.617.6863)

FLUANCE® is a registered trademark of Circus World Displays Limited
01.2015